

USING YOUR  
**LED Light Remote Control**



USING YOUR

# LED Light Remote Control



## Simple Trouble Shooting

### - If the light is not responding to the remote:

Ensure the remote indicator light is flashing when remote buttons are being pressed.

If no indicator light flashes, try replacing the batteries in the back of the remote.

### - If there is a hand, door or movement sensor with the light:

#### **Cant turn on light with the remote?**

Ensure the sensor is activated for the light to turn on and be controlled by the remote.

**Hand Sensor or Movement Sensor** -> Wave hand over sensor to activate then use remote.

**Door Sensor** -> Open door to activate then use remote.

### - Sensor won't turn on the light?

Ensure the light has not been turned off by the remote.

**Hand Sensor or Movement Sensor** -> Wave hand over sensor to activate then use remote to turn on. (You may have to try this a few times to get sensor in the ON state).

**Door Sensor** -> Open door to activate then use remote to turn on.

